




Berger Product Information

How to cut Microbacklight FR +w


Step 1

Unroll the print, just cut in length not in width, and lay the print flat on the table.

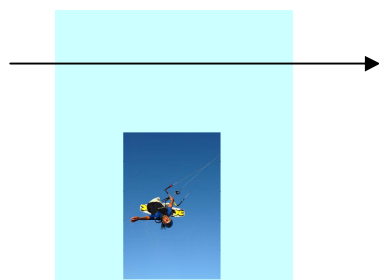


Just do a rough cut, try to cut a sharp edge on the image

Step 2

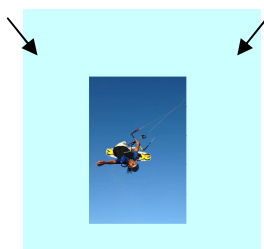

Fix with needles or tape

Step 3:

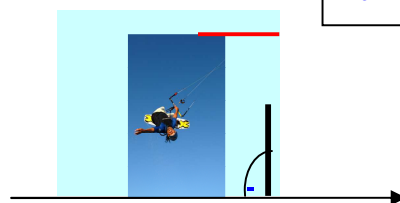

Mark top of picture

Cut 90° bottom of the picture, mark the top of the picture on the side of the fabric

www.bergertextil.com


A. Berger GmbH & Co. KG: Kuhleshütte 84 | 47809 Krefeld | Germany | phone: +49 (0) 21 51 65231-0 | fax: +49 (0) 21 51 65231-25

The information in this information sheet are based on findings obtained in practice. Because of the high number of factors which can have an effect during handling and application, customers tests will be required. A legally binding guarantee of specific properties is not to be inferred from our technical information. The information given here may be subject to be changed without notice. This product does not require MSDS data sheets.




How to cut Microbacklight FR +w


Step 4

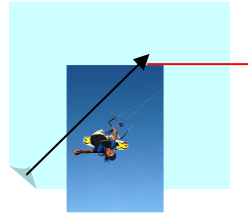

Fold it to the top mark and then cut the top straight in 90°

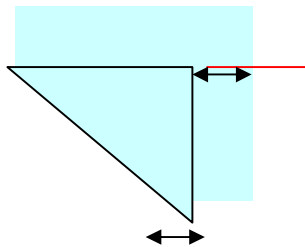

Check distance on both ends to get the 90°

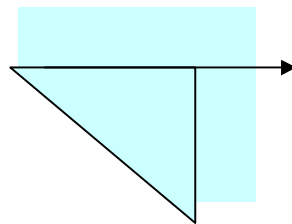


Cut the top of the image

Now you have parallel top and bottom.



Step 4

Cut 90° top down on both sides,

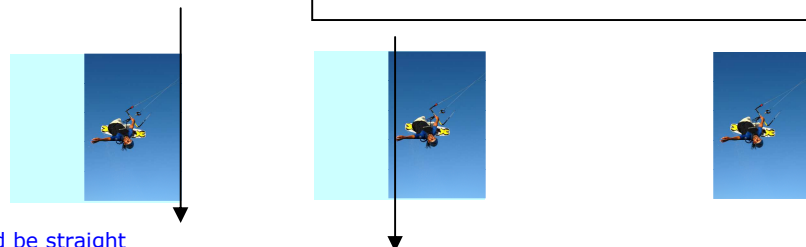

Now your picture should be straight

Your Berger Team (13th July 2011)

www.bergertextil.com

A. Berger GmbH & Co. KG: Kuhleshütte 84 | 47809 Krefeld | Germany | phone: +49 (0) 21 51 65231-0 | fax: +49 (0) 21 51 65231-25

The information in this information sheet are based on findings obtained in practice. Because of the high number of factors which can have an effect during handling and application, customers tests will be required. A legally binding guarantee of specific properties is not to be inferred from our technical information. The information given here may be subject to be changed without notice. This product does not require MSDS data sheets.